

## Quick Reference Guide: Loading Lotto Paper into the Compact Lottery Terminal

This Quick Reference Guide will show you how to load Lotto Paper into the Compact Lottery Terminal.



### Follow these simple steps:



- 1 Remove the sticker from the paper roll.

The Lotto Paper for the Compact Lottery Terminal is a smaller roll of paper than the roll of paper for the Self-Serve Terminal or full size Lottery Terminal. When ordering, be sure to order the correct paper size for your Compact Lottery Terminal.

- 2 Press the Printer button on the left side to release the Printer door.



- 3 Load the paper roll into the Printer with the BCLC colour bar on the left.





- 4 Pull out the Lotto Paper so that it extends past the edge of the printer door.

- 5 Close the printer door by pushing all the way down until you hear a click. The cutter will automatically trim the paper.



- 6 Press the paper feed button to ensure the Lotto Paper feeds through correctly.

## Best Practice

Replace the paper roll when the Lottery Terminal displays a prompt indicating that you will soon run out of Lotto Paper.

**You have now successfully loaded your Compact Lottery Terminal with a new roll of Lotto Paper!**