

 3 MIN READ, 5 PAGES

Using Your Lottery Terminal

Powering On The Equipment

[How to Power on the Lottery Terminal & Printer](#)

[How to Power on the Compact Lottery Terminal](#)

[How to Power on the Self-Serve Terminal](#)

[How to Power on the Ticket Checker](#)



Call or text Lottery Retail Support:
1-800-667-1649



Using your Lottery Terminal

Powering On The Equipment



In this Retailer Information Sheet, you will learn how to power on the Lottery Terminal & Printer, the Compact Lottery Terminal, the Self-Serve Terminal and Ticket Checker.


Lottery Terminal (at RSG, RN and Select HN)

1. Ensure there is power to the Lottery Terminal.
2. Press the POWER button located on the front bottom near the ON/OFF decal.
3. When powered on, a red light illuminates in the ticket tray.
4. If the Lottery Terminal fails to power on contact Lottery Retail Support.



Printer (at RSG, RN and Select HN)

1. Power on the Printer by pressing the Power button on the front lower right-hand corner of the Printer.
2. When powered on, the power button is green.

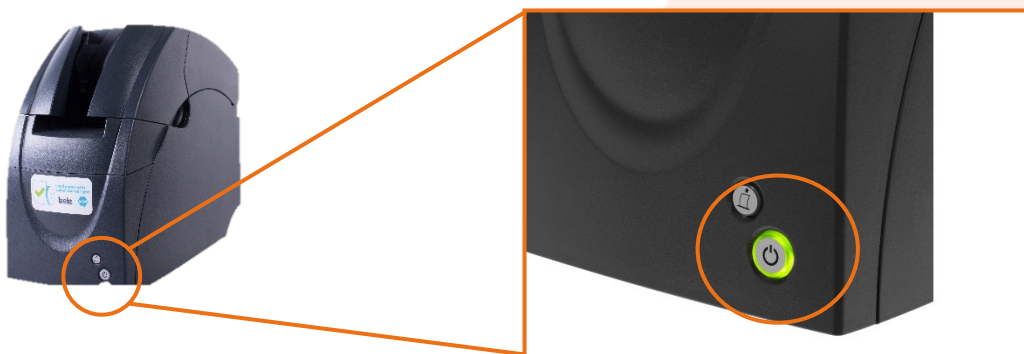

Call or text Lottery Retail Support:
1-800-667-1649



Using your Lottery Terminal

Powering On The Equipment



Compact Lottery Terminal (Select HN locations)

1. Ensure there is power to the Compact Lottery Terminal.
2. Locate the power button at the back of the monitor.
3. When powered on, a red light illuminates in the Ticket Tray.
4. If the Compact Lottery Terminal fails to power on contact Lottery Retail Support.



Call or text Lottery Retail Support:
1-800-667-1649



Using Your Lottery Terminal

Powering On The Equipment



Self-Serve Terminal (at HN Locations)

1. Ensure there is power to the Self-Serve Terminal.
2. Use the **Blue** key to open the bottom drawer
3. To turn the Self-Serve Terminal ON, use the switch located on the power bar located on the right.
4. If the Self-Serve Terminal fails to power on contact Lottery Retail Support.



Call or text Lottery Retail Support:
1-800-667-1649




New Lottery Equipment

Powering On The Equipment



Ticket Checker (all Locations)

1. Ensure there is power to the Ticket Checker.
2. Press the POWER button located on the back left of the ticket checker.
3. When powered on, the screen will display a message.
4. If the Ticket Checker fails to power on contact Lottery Retail Support.

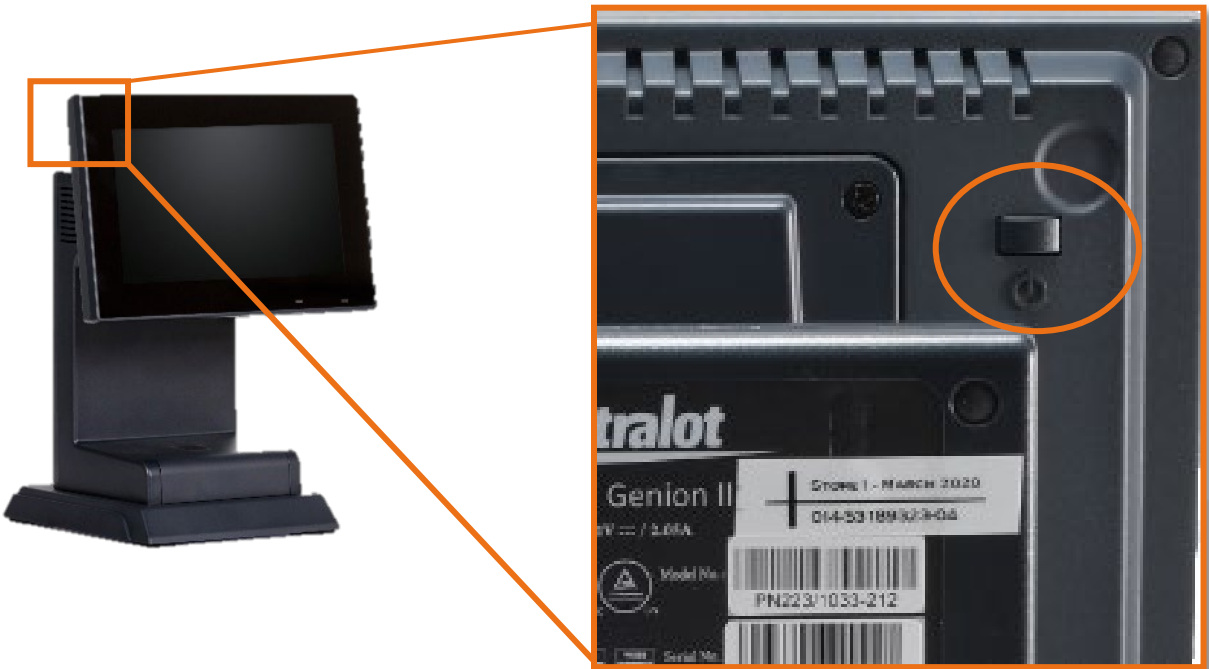

Call or text Lottery Retail Support:
1-800-667-1649

